



2V9WP Instruction Manual


IMPORTANT

- Do not open the battery door while submerged in water.
- Close the battery door properly for the best water-tight seal.
- Ensure that the latch on the battery door is correctly closed.
- Rinse with clean water after use.

1. Getting to Know Your Camera

Ultra Slim Waterproof Design
 Waterproof up to 10 ft. / 3 meters
 20.0 Mega Pixels Max Resolution
 Wide Angle Lens
 Digital Still Camera
 Digital Video Camcorder
 Built-in Flash Light
 4X Digital Zoom
 2.7" x 1.8" TFT Color Display
 Micro SD / SDHC Card Support
 2x AAA Alkaline Batteries


2. Functional Parts

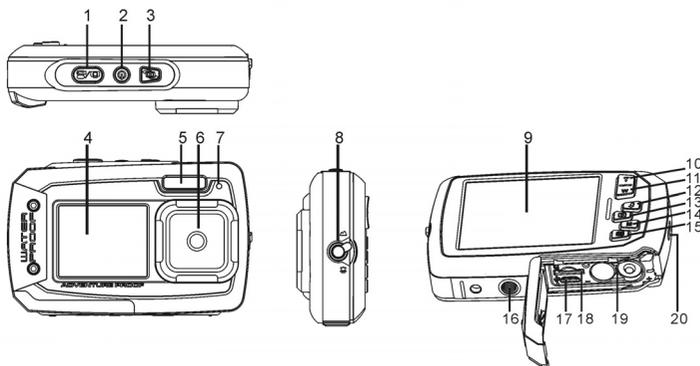

1	Shutter	Press this button to take photographs or to start /stop recording a video clip, or to confirm changes in menu mode
2	Power on/off button	Press this button for at least 2 seconds to switch on or off the camera, or press it to display or hide the status icon on LCD.
3	Monitor switching button	Press this button to switch between the front monitor and the back monitor.
4	Front monitor	Use the front monitor when taking self-portrait shots
5	Flash light	Use the built-in flash to give the subject extra lighting when shooting in the dark (the best shooting distance is within 1.5m).
6	Lens	Capture the image. Note: Keep the lens clean. Dirt and fingerprints will affect the quality of the picture.
7	Busy indicator	When the indicator is blinking, the camera is busy.
8	Strap hook	Hook for attaching the wrist strap to the camera.
9	Main Screen	Display photographs, video clips, camera setting and menu.
10	Up/Tele	In Preview mode: press this button for zooming in. In Menu mode: press this button to move up the selection bar. In Image Playback mode: press this button for enlarging the photo. In Video Playback mode: press it to start/pause the video.

11	Down/Wide	In Shooting mode: press this button for zooming out. In Menu mode: press this button to move down the selection bar. In Image Playback mode: press this button for reducing the photo size. In Video Playback mode: press this button to enter the thumbnail mode
12	Left / Flash light	In Menu mode: press this button for the left selection; In Playback mode: press this button to go back to the previous one; In Photo Infinite Preview mode: press this button to switch to Flash mode; When zooming in under Image Playback mode: press it to move to the left portion of the photo. In Video Playback mode: press it for fast rewind.
13	Right / Playback	Press this button to enter Playback mode; In Playback mode: press this button to move to the next one; In Menu mode: press this button for the right selection; When zooming in under Image Playback mode: press it to move to the right portion of the photo. In Video Playback mode: press it for fast forward.
14	Mode Switch	Press this button to switch between movie and still capture mode; In Playback mode: press this button to exit. When zooming in under Image Playback mode: press it to move to the upper portion of the photo. In Video Playback mode: press it to stop the video.
15	Menu / Delete	In Preview mode: press it to enter the Settings Menu. In Playback mode: Press it for a short time to enter the "Delete single/ all files" mode; Press it for a long time to enter the "File compiling and system settings menu". When zooming in under Image Playback mode: press it to move to the lower portion of the photo.
16	MicroSD card slot	MicroSD card storage location.
17	USB interface	You can download photographs and video clips to a computer when connecting with a USB cable. (not included)
18	Battery compartment	Compartment for 2 x AAA alkaline batteries
19	Tripod connector	For fixing the camera on the tripod.

3. Explanation of Status Icons

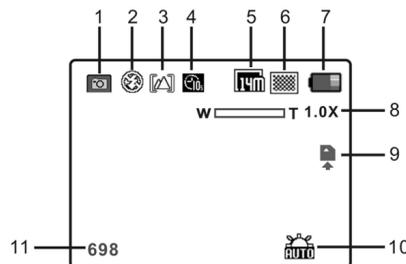

Item	Function	Description
1	Mode	Shows the current operating mode: Photo mode. Videos mode.
2	Flash	Force flash: The flash will be on under any environment. Auto flash: The camera determines if the flash should be used or not. No flash: The flash is turned off.
3	Self-Timer	Indicates the Self-timer is set
4	Normal / Macro Mode	Mode (0.5m – infinity). Macro mode (11cm – 18cm).
5	Resolution	Shows the selected picture's resolution: 20 M = 5184X3888; 14M = 4320x3240; 8M = 3264x2448; 5M = 2592x1944; 3M = 2048x1536; VGA = 640x480
6	Picture quality	Super fine Fine Normal
7	Battery indicator	The batteries are full. The batteries are empty.

8	Zoom indicator	Shows the zoom ratio during preview mode
9	MicroSD card	Indicates the MicroSD card is inserted and will be used as storage for PHOTO and VIDEO
10	White Balance	Shows the selected White-balance mode.
11	Photo/Video counter	Photo mode: No. of pictures that can be taken. Video mode: Recording time in seconds.

4. Camera Settings Details


Category	Setting	Options	Description
Photo	Resolution	20M pixel resolution	5184X3888
		14M pixel resolution	4320x3240
		8.0M pixel resolution	3264x2448
		5.0M pixel resolution	2592x1944
		3.0M pixel resolution	2048 x 1536
		VGA resolution	640 x 480
	Quality	Super Fine/Fine/Normal	Picture quality setting
	Metering	Center/Multi/Spot	Metering setting
	White Balance	Auto	Automatic white balance
		Daylight	White balance for shooting under fine weather condition
		Cloudy	White balance for shooting under cloudy condition
		Tungsten	White balance for shooting under tungsten lighting
	Fluorescent	White balance for shooting under fluorescent lighting	
ISO	Auto/100/200/400/800	Sensitivity selection	
Exposure	±2.0, ±5/3, ±4/3, ±1.0, ±2/3, ±1/3, 0	Exposure setting	
Self Timer	On/Off	Self timer setting	
Sharpness	Hard/ Normal/ Soft	Sharpness setting	
Effect	Normal/ B&W/ Sepia/ Negative/ Lomo/ Pencil Sketch/ Red/ Green/ Blue/ Vivid	Effect setting	
Date Stamp	On/ Off	Date stamp setting	
Quick View	On/ Off	Quick view setting	
Video	Movie Size	VGA 640 x 480 QVGA 320 x 240	Video resolution setting
	White balance	Auto	Automatic white balance
		Daylight	White balance for shooting under fine weather condition
		Cloudy	White balance for shooting under cloudy condition
		Tungsten	White balance selected for shooting under tungsten lighting
	Fluorescent	White balance for shooting under fluorescent lighting	
Setup	Sounds	Off/On	Sounds setting
	Frequency	50Hz / 60Hz	Select power frequency in your location
	Power Save	Off / 1Minute / 3 Minutes	Auto power off selection
	Language	English/ French/ Deutsch/Italian/Spanish/ Portuguese/Japanese	Display language selection
	Date/Time	YY/MM/DD	Date or time setting
	Format	Yes/No	Format the MicroSD Card
	Reset All	Yes/No	Reset all settings to factory default positions
Version		Shows the firmware version	

Note: Turning off the camera will not erase the last settings.

5. Using the camera

5.1 Installing the batteries

1. Open the battery door.
2. Insert 2 x AAA alkaline batteries into the battery compartment.
3. Close the battery door.

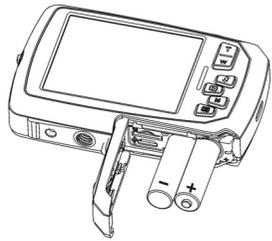


Note: Make sure that the batteries are inserted in the right directions (as marked in the diagram above)

5.2 Inserting a MicroSD Memory Card (not included)

This camera has no built-in internal memory. The memory can be gained with a MicroSD memory card (not included).

Follow the instructions below to insert the optional MicroSD memory card into the camera.

1. Turn off the camera first.
2. Open the battery door (please make sure the battery door was unlocked before open).
3. Insert the MicroSD card into the camera.

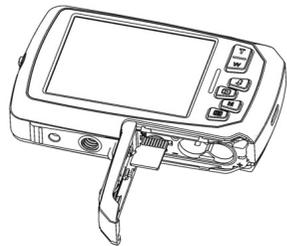

Note:

1. There is only one right direction to insert the MicroSD memory card into the slot. Do not force the card into the memory card-slot, which may damage both the camera and the MicroSD memory card.
2. The MicroSD memory card must be formatted before taking photographs. See the following section for more information.

5.3 Formatting the MicroSD Memory Card

1. Press the Menu button () in PHOTO or VIDEO mode.
2. Select the setup mode by pressing the Right button.
3. Select the format icon by pressing the **W**() button and press the Shutter button to confirm.
4. Press the Shutter button to format the MicroSD memory card.

5.4 Setting the Resolution

The camera can be set to different resolutions.

1. Press the Menu button () in PHOTO mode, select the resolutions icon by the **W** () key and press the Shutter to confirm.
Available resolutions: VGA (640 x 480), 3M (2048 x 1536), 5M(2592x1944); 8M(3264x2448); 14M (4320x3240) ; 20M=5184X3888.
2. Five different resolutions will be displayed. Select the desired resolution by using the Up or Down button and press the Shutter button to confirm the selection.

5.5 Taking Photographs

1. Turn on the camera.
2. If you are not sure if there is enough lighting, turn on the automatic flash() by pressing the Flash button. (If the battery power is too low, the flash will not be activated).
3. Use the LCD screen to aim at the object you wish to take photographs of.
4. Press the Shutter button and wait until the LCD display turns on again.

Caution:

- 1) Taking pictures for fast-moving object is not recommended.
- 2) Image may be distorted when taking pictures in a moving vehicle.

5.6 Zoom In and Out

The camera can zoom in up to 4 times.

Zoom in or out by pressing the Up or Down button, a number will appear on the display, 4x is the maximum zoom ratio.

5.7 Taking a Self-Portrait Shot Using the Front Monitor

If you want to take a photo of yourself, you can simply use the front LCD screen. Follow the steps below:

1. Press the Monitor switching button to switch to the front monitor.
2. Use the front monitor as a viewfinder to aim at yourself.
3. Press the Shutter button to take a photo of yourself.

5.8 Self-Timer Setting

You can also use the self-timer function when you take a photograph of yourself or when you take a photograph without flash of an object. To avoid shaking of the camera , a tripod is recommended.

1. Set the camera to photo mode.
2. Press the Menu button (). The menu will appear.
3. Press the **W**() button to select Self Timer and confirm by pressing the SHUTTER button.
4. Press the **W**() button to select the “On” option
5. Press the Shutter button to confirm. The self-timer function is now ready for use.
6. Aim at the object you wish to take photos of.
7. Press the Shutter button to take a photograph.
8. The photo will be taken after the timer reaches the delay time of 10 seconds. The camera will beep during the delay time.

5.9 Recording Video Clips

1. Press the Mode button to select the video clip mode ().
2. For setting the resolution, Press the Menu () button and select Resolution, then press the Shutter button to confirm. Two resolutions will be displayed.
VGA (640 x 480), QVGA (320 x 240).
3. Press the Shutter button to start recording videos, press the right button to pause and press the Shutter button again to stop recording. The video clip will then be saved as an AVI file in the MicroSD memory card.

5.10 Playback Photographs

The camera provides two options for playback: a) Single b) Thumbnail

1. Press the Playback () button to enter the Playback mode.
2. The last picture or video clip taken will be displayed. Press the **W** () to enter the thumbnail mode. Press the Left /Right /Up /Down button to select the desired picture, and press the Shutter button to view.
3. In full screen display, press the **T**() button to zoom in the photo.
4. To shift the image in zoom-in mode, press the Mode/Menu/Left/Right buttons.
5. Press the Menu () button in Playback mode, press again and hold the Menu button until the menu options displayed. Select slide show and set up the desired slide show way. Press the Shutter button to confirm. The pictures saved in the MicroSD card will be displayed in sequence automatically. To stop the slide show, press the Shutter button.
6. Press the Menu () button in Playback mode, press again and hold the menu button until the menu options displayed. Select Photo Effect and press the Shutter button. Select the desired effect by pressing the up/down button and press the Shutter button to confirm. The image will be saved as a separate image.

5.11 Protecting Photographs / Videos

You can prevent the photographs/videos in the MicroSD card from accidental erasure.

Follow the instructions below to protect photographs/videos.

1. Press the Playback () button to enter the Photo playback mode.
2. Press the Left or Right button to select the photograph/video clip to be protected.
3. Press the Menu () button in Playback mode, press it again and hold the Menu button until the menu options displayed. Select Protect and press the Shutter button
4. Select “Single” or “Protect all” and press the Shutter button to confirm.

5.12 Resizing Photographs

A captured image can be resized and saved as a separate image.

Follow the instructions below to resize photographs.

1. Press the Playback () button to get into Photo playback mode.
2. Press the Left or Right button to select the photograph to be resized.
3. Press the Menu () button in Playback mode, press it again and hold the Menu button until the menu options displayed. Select Resize and press the Shutter button
4. Select the new size and press the Shutter button to confirm. The image will be saved as a separate image.

5.13 Playback Video Clips

1. When video clips are displayed, press the Up button to start video playback and press the Up button again to pause the playback.
2. Press the Right button for fast forward or press the Left button for fast rewind.
3. Press the Mode button to stop and exit .

5.14 Deleting Photographs and Video Clips

You can delete a single photograph / video clip, or delete all the photographs / video clips in the memory card.

Follow the instructions below to delete photographs/videos.

1. Press the Playback () button to enter the playback mode.
2. Press the Left or Right button to select the photograph/video clip to be deleted.
3. Press the Menu/Delete button () and select “Single” or “All” .
4. Press the Shutter button to confirm.
5. Press the Menu button to exit.

NOTE: Select “All” and press the Shutter button to confirm, all the pictures and videos will be deleted. Photos that are protected from accidental erasure cannot be deleted. To delete photos, set the protect setting for the set photos to unprotect mode (Section 5.11), you can then delete the photos by following the above 1- 5 procedures.

6. Connecting to a PC

The unit can be connected to the computer as mass storage device and transfer photo/video files for storage.

7. Specifications

Sensor	14.0 Mega pixels CMOS sensor
Image resolution	20 Mega pixels: (5184X3888)
	14 Mega pixels: (4320x3240)
	8.0 Mega pixels: (3264x2448)
	5.0 Mega pixels: (2592x1944)
	3.0 Mega pixels: (2048x1536)
	VGA: (640x480)
Lens	F/2.8 f = 8.5mm
Focus range	0.5m– infinity
Digital zoom	4x
Flash strobe	Built-in (Auto / force / off)
M-Shutter	Yes
LCD display	2.7+1.8" TFT LCD color display
White balance	Auto / Daylight / Cloudy / Tungsten/ Fluorescent
Video Frame Rate	30fps@VGA / 30fps@QVGA
External Storage Media	MicroSD card, not included (supports up to 32GB)
File format	Picture: JPEG, Video: AVI
Self timer	10 seconds
PC interface	USB 2.0
Power source	2 x AAA alkaline batteries

8. Computer System Requirements

Operating system	WinXP (SP3)、 Vista32/64 Win7&Win8 32/64 and Mac OS X 10.6.8 or above
CPU	Pentium III or above
RAM	At least 64MB
Interface	USB port
CD	4x speed CD ROM or above

9. Troubleshooting

Problem	Cause	Solution
Cannot turn on the camera	Low battery power. Batteries placed at wrong polarities.	Replace or install the batteries correctly.
Photos can not be saved when taking pictures.	The memory card hasn't been formatted properly.	Format the memory card in setup mode of the camera. Please refer to section 5.3.
Cannot find removable disk after connecting the camera to the computer.	Connection failure.	Make sure all cable connections are secured and restart the computer if necessary.
Flash does not work.	Battery power is too low.	Replace with new 2 x AAA alkaline batteries
The batteries used up very fast.	Old, used up, battery	Replace with new 2 x AAA alkaline batteries
The photos are blurry	1. The camera is not held steadily 2. The lens of camera is dirty.	1. Hold the camera steadily until it beeps when taking photos. 2. Clean the lens with soft and dry cloth.